



Presenting A Dell Power Point Program

Master Gardeners

Cuyahoga County



Checklist for Dell Projector

Projector


**Blue
Connector
Cables**

**Power
Cord**

Remote

Gold USB



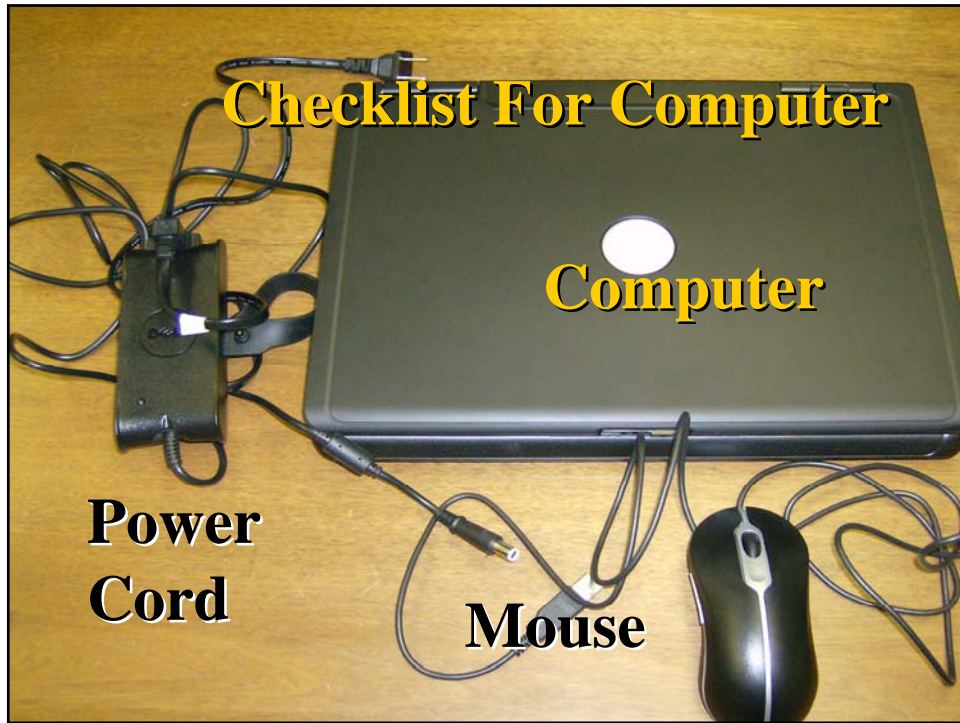


**Setting up
the
Dell Projector**

**Set Up Projector
Before Setting
Up Computer**








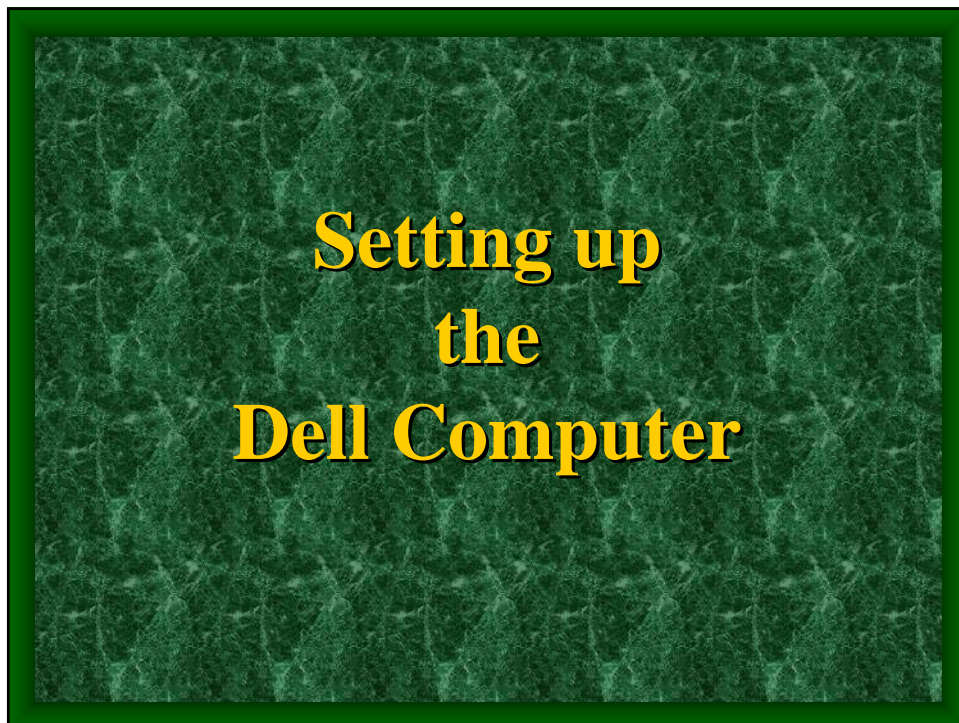



**3. Plug in mouse into either
USB port on right hand side
of computer**

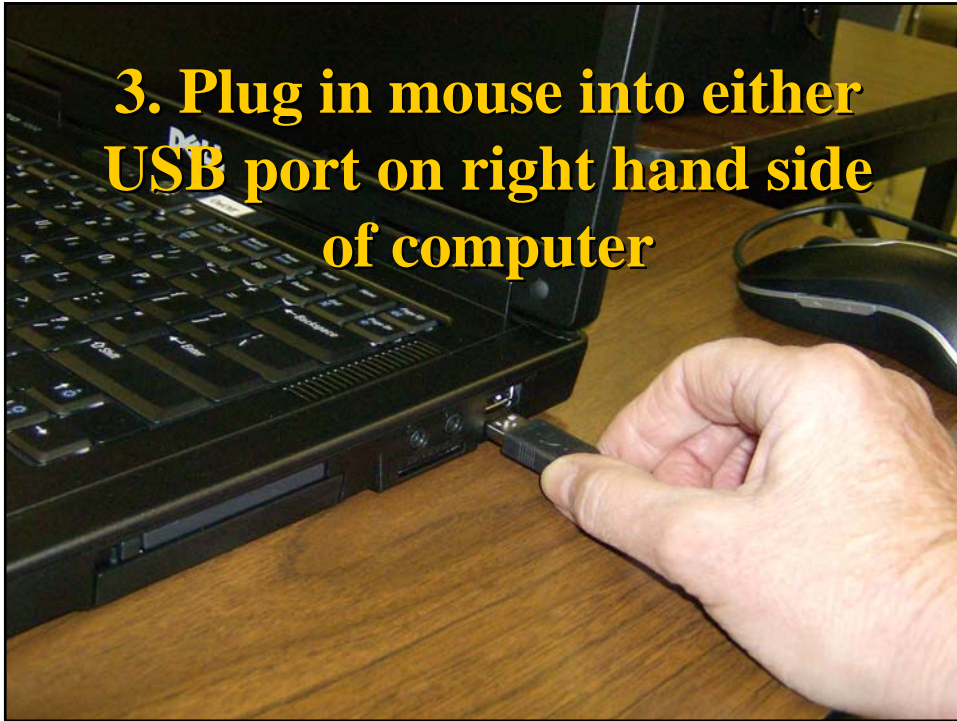

4. Press On/Off Button




**Do Not Unplug Or Turn
Off Projector Until Blue
Light Blinks and Fan
Turns Off.
This Will Damage
The Bulb**

**Making Height Adjustments
to Dell Projector:
Press Height Adjustment Button
Foot Will Fall to Raise Height**





**Making Level Adjustments
on Dell Projector
(on both back feet)
Hold buttons In to Lower
Feet**

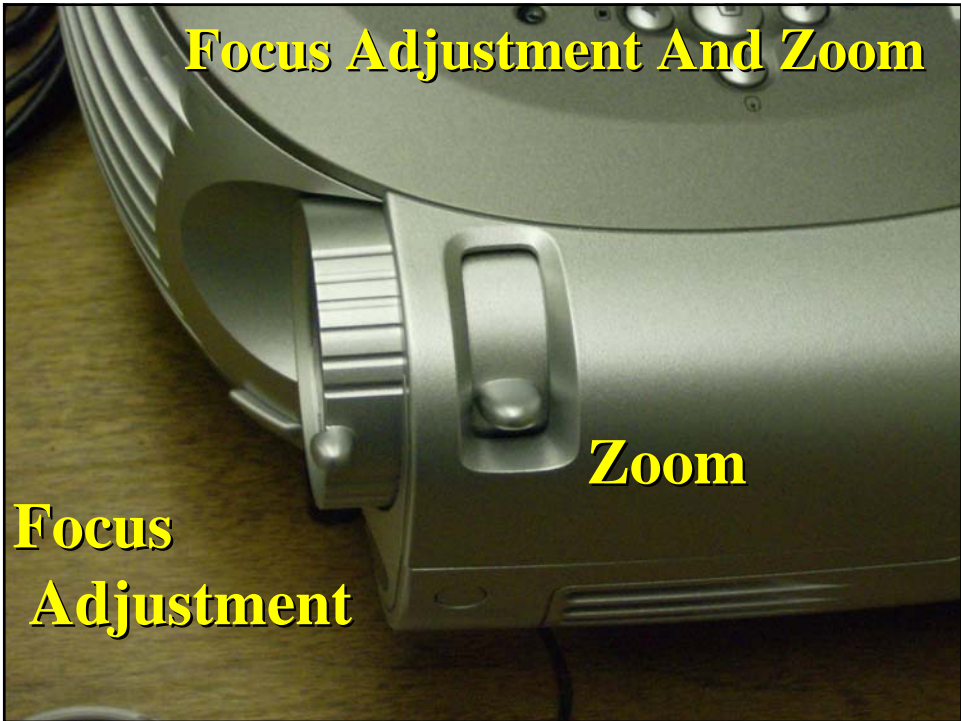

Focus Adjustment And Zoom

**Focus
Adjustment**

Zoom

Getting the Presentation on the Screen

- *Click on “X” to close Norton Antivirus screen*
- *Double click on MG presentation icon*
- *Presentations are installed under MG Presentation icon*

Using A CD or Memory Stick

- *Presentations can be run from a CD, or memory stick, but for best results, presentations should be installed on computer*

**Disc Drive is on Left Hand
Side of Computer**



**Push Button in Middle
And Drive Pops Out**





**Starting a Power Point
Program from MG Icon**

- Using Mouse, double click on presentation you wish to give
- To begin slide show, go to menu bar and click on “SLIDE SHOW”
- Then click on “VIEW THE SHOW”

Using The Remote Control

- Use “Next” or “Previous” to Move Through Slides*
- Hit Power Button Twice to Turn Projector Lamp Off*
- Blue Light Remains Steady as Fan Cools Bulb*
- Do Not Unplug Projector until blue light blinks*

Ending a Power Point Program : Dell Projector

- 1. Double click ‘POWER’ button on remote or push on/off button on top of projector twice. Blue light remains steady as fan cools bulb.*
- 2. Wait until blue light blinks, then unplug power cord.*


Ending a Power Point Program : Dell Projector

3. Replace lens cap.

4. Lower rear feet .

*5. Hold in ‘height’ button and
push front foot up.*

*6. Pack up projector and projector
cord into projector case.*

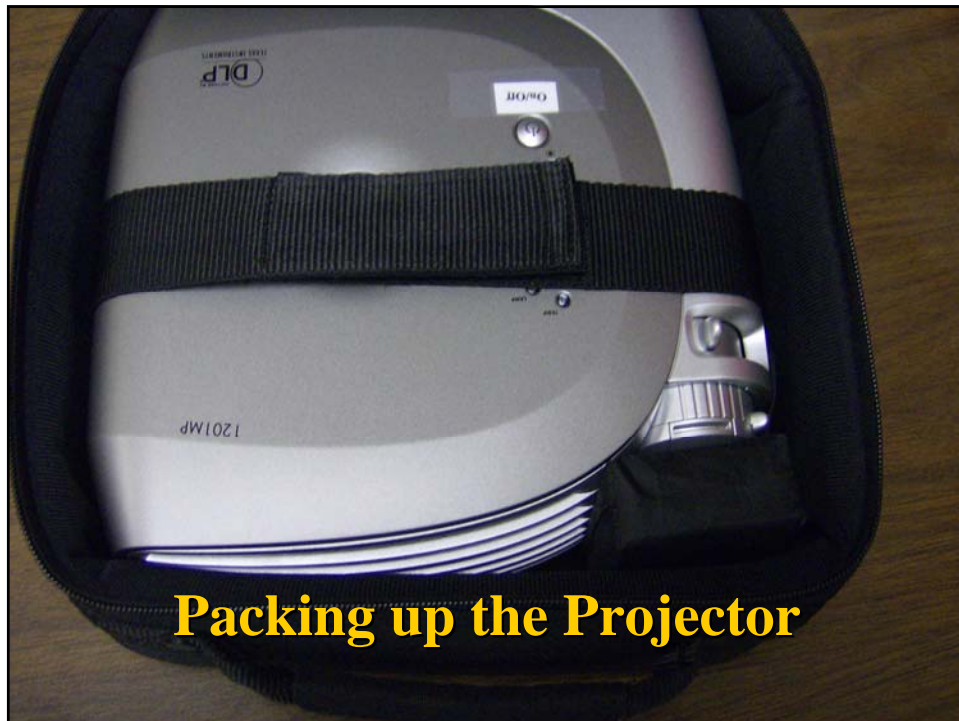

Ending a Power Point Program:Dell Computer

- 1. Use mouse, go to “file” in upper right hand corner. Click on “close”.*
- 2. Remove CD if used.*
- 3. Use mouse, single click on “start”
In lower left hand corner of screen.*
- 4. Use mouse, click on “turn off
Computer”*

Ending a Power Point Program:Dell Computer

- 5. Use mouse, click on “turn off”.*
- 6. Unplug computer from wall.*
- 7. Remove power cord ,gold USB
connector, blue connector and
mouse from computer.*

Ending a Power Point Program:Dell Computer

*8. Place computer in
carrying case.*

9. Return mouse to pocket .

*10. Place cords in computer
carrying case.*

**Do Not Unplug Or Turn
Off Projector Until Blue
Light Blinks
and Fan Turns Off
This Will Damage
The Bulb**

Credits

**Photography and Script:
Kathleen Habib,
Master Gardener**

2008